


## SERVICE & OPERATING MANUAL

# BLAGDON PUMP®

## Model X75 Metallic Design Level 1

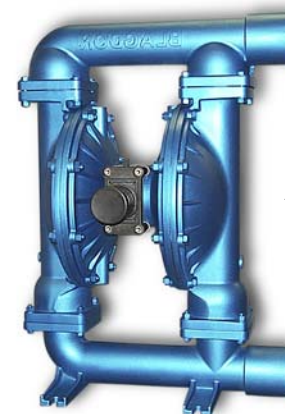


See pages 2 & 23  
for ATEX markings.



## Table of Contents

Engineering Data and Temperature Limitations .....	1	Material Codes .....	10
Typical Code .....	2	Composite Repair Parts Drawing .....	12
Performance Curve .....	3	Available Service and Conversion Kits .....	12
Dimensions (Side Porting) .....	4	Composite Repair Parts List .....	13
Dimensions (Center Porting) .....	5	Air Valve Assembly Drawing, Servicing & Parts List .....	14
Principle of Pump Operation .....	6	Diaphragm Service Drawing, with Overlay .....	15
Installation and Start-Up .....	6	Diaphragm Service Drawing, Non-Overlay .....	15
Air Supply .....	6	Diaphragm Servicing .....	16
Air Valve Lubrication .....	6	Overlay Diaphragm Servicing .....	16
Air Line Moisture .....	6	Pilot Valve Servicing, Assembly Drawing & Parts List .....	17
Air Inlet and Priming .....	6	Actuator Plunger Servicing .....	18
Between Uses .....	6	Check Valve Servicing .....	19
Installation Guide .....	7	Check Valve Drawing .....	19
Troubleshooting .....	8	Pumping Hazardous Liquids .....	20
Warranty .....	8	Converting Pump for Piping Exhaust Air .....	20
Recycling .....	9	Converted Exhaust Illustration .....	20
Important Safety Information .....	9	Grounding the Pump .....	21
		EC Declaration of Conformity - Machinery .....	22
		EC Declaration of Conformity - ATEX 95a .....	23



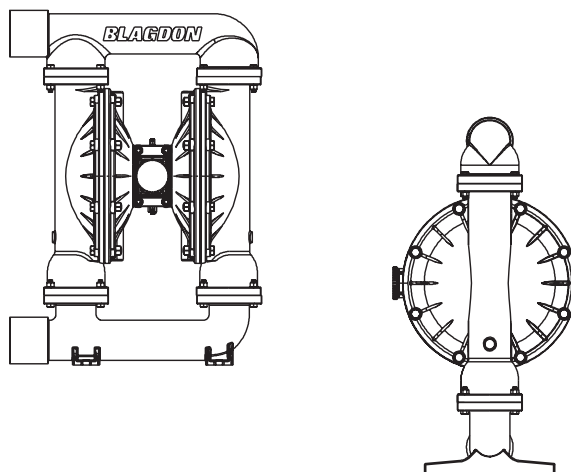


# X75 Metallic Design Level 1 Ball Valve

## Air-Powered Double-Diaphragm Pump

ENGINEERING, PERFORMANCE  
& CONSTRUCTION DATA

INTAKE/DISCHARGE PIPE SIZE 3" BSPT (tapered), 3" BSP Parallel (internal), or 3" NPT	CAPACITY 0 to 196 UK gallons per minute (0 to 889 liters per minute)	AIR VALVE No-lube, no-stall design	SOLIDS-HANDLING Up to .25 in. (6mm)	HEADS UP TO 125 psi or 289 ft. of water (8.6 Kg/cm <sup>2</sup> or 86 meters)	DISPLACEMENT/STROKE .78 UK Gallons / 3.56 liters
<b>⚠ CAUTION! Operating temperature limitations are as follows:</b>					
<b>Materials</b>				<b>Operating Temperatures</b> <b>Maximum</b> <b>Minimum</b>	
<b>Nitrile</b> purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons.				190°F 88°C	-10°F -23°C
<b>EPDM</b> Shows very good water and chemical resistance. Has poor resistance to oil and solvents, but is fair in ketones and alcohols.				280°F 138°C	-40°F -40°C
<b>Neoprene</b> All purpose. Resistant to vegetable oil. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters, nitro hydrocarbons and chlorinated aromatic hydrocarbons.				200°F 93°C	-10°F -23°C
<b>Santoprene®</b> Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance.				275°F 135°C	-40°F -40°C
<b>Virgin PTFE</b> Chemically inert, virtually impervious. Very few chemicals are known to react chemically with PTFE: molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures.				220°F 104°C	-35°F -37°C
<b>FKM</b> Shows good resistance to a wide range of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack				350°F 177°C	-40°F -40°C
<b>Conductive HDPE</b>				180°F 82°C	32°F 0°C

# TYPICAL CODE=

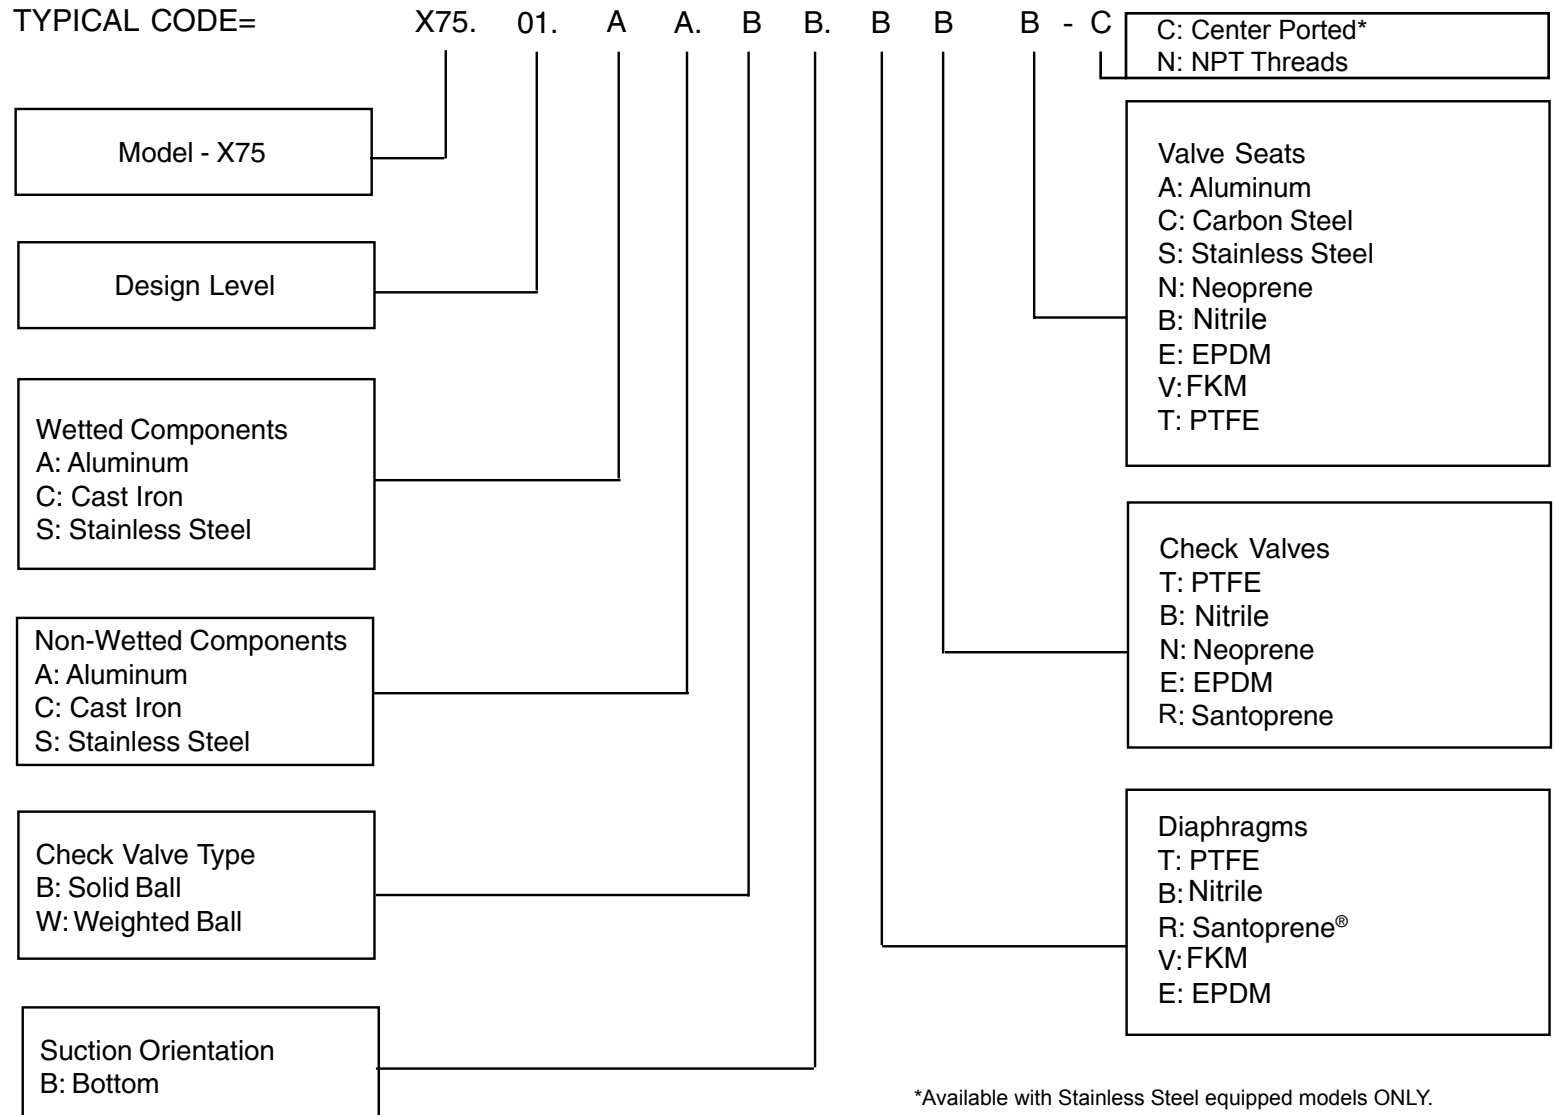

\*Available with Stainless Steel equipped models ONLY.



II 1G c T5  
II 3/1 G c T5  
II 1D c T100°C  
I M1 c  
I M2 c

Models equipped with Wetted Options  
C or S, Non-Wetted Options C or S.  
Note: See page 23 EC-Type Certificate.


II 2G c T5  
II 3/2 G c T5  
II 2D c T100°C

Models equipped with Wetted Options A, C  
or S, Non-Wetted Options A, C or S.  
Note: See page 23 Type Examination  
Certificate.

Maximum delivery: 567 ltrs/min  
Max. working pressure: 8.6 bar  
Max. solid particle size: 6mm  
Air inlet: 3/4" BSP (Parallel, Internal)  
Temperature limits: Determined by elastomers  
Fluid inlet/outlet: 3" BSP (Parallel, Internal)  
3" BSP Tapered Center-Port Stainless Steel ONLY  
3" NPT Center-Port Stainless Steel ONLY

Installation: Surface mounted  
Accessories included: Exhaust air silencer  
Shipping weights with  
Aluminum mid sections: A: 52kg  
C: 98kg  
S: 87kg  
Shipping dimensions: 560x430x690mm


# Performance Curve

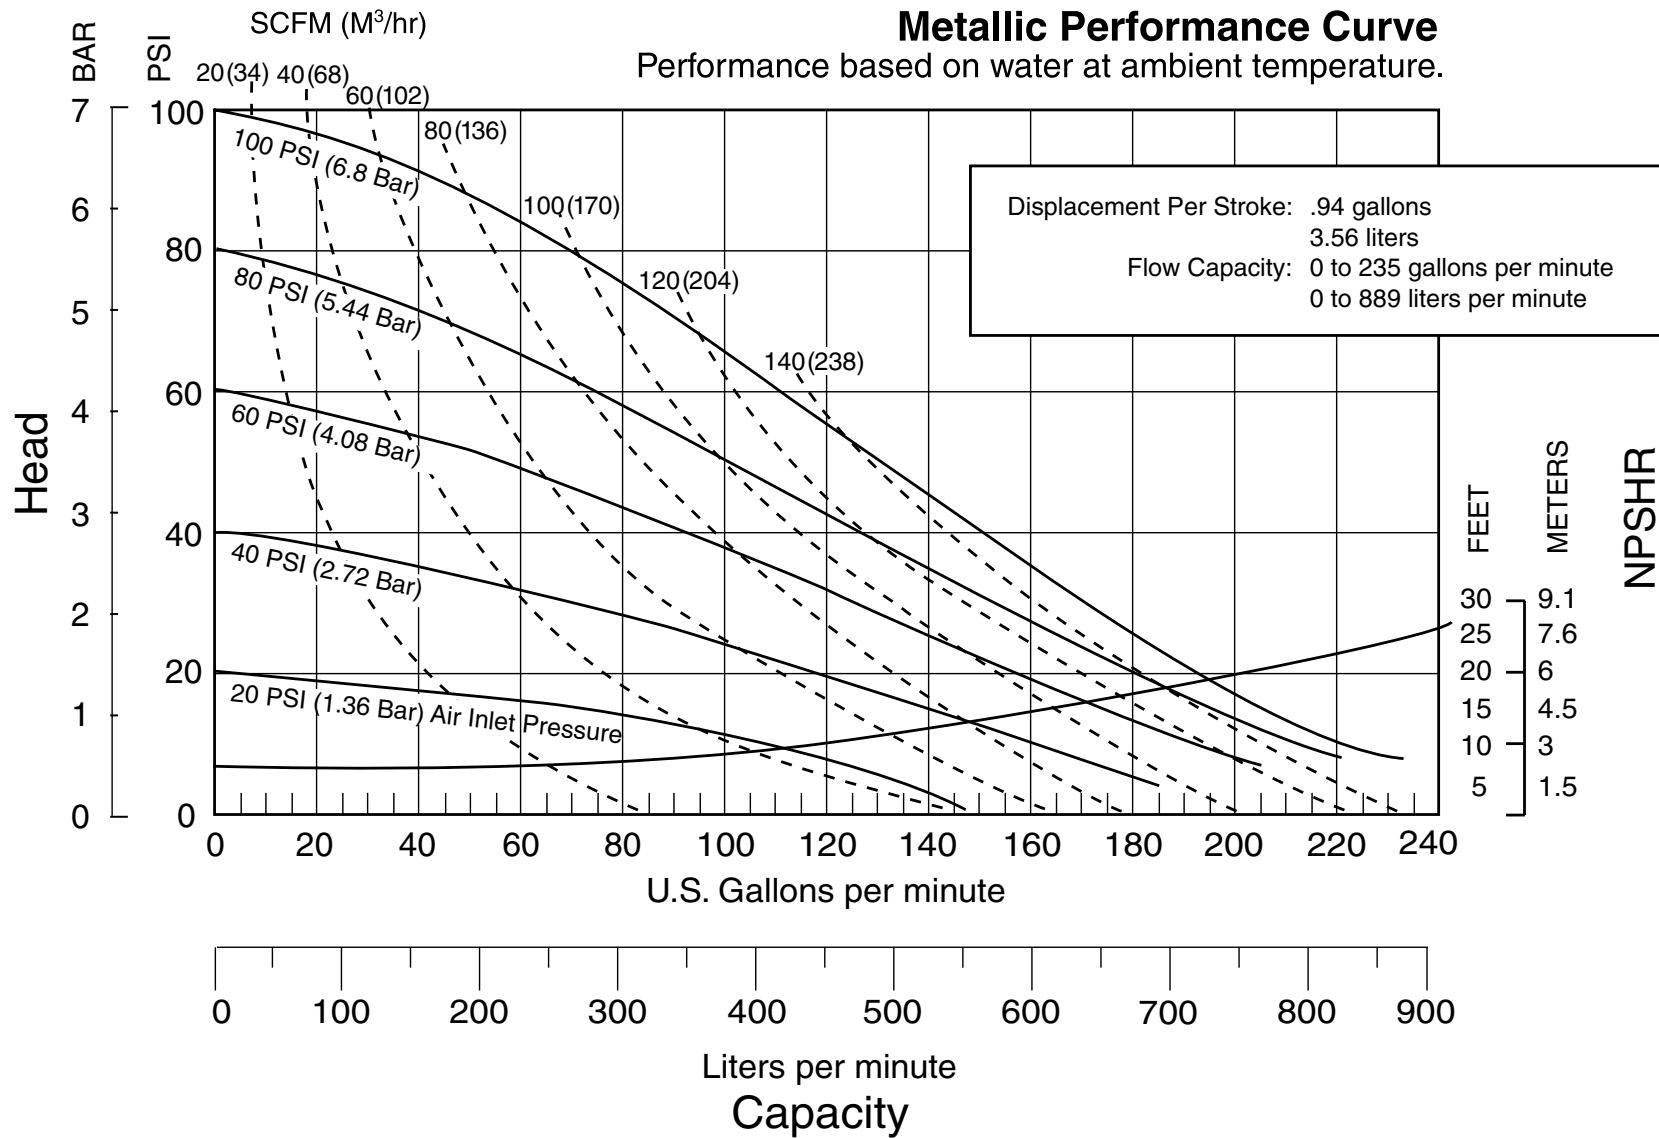

## Dimensions (Side Porting):

Dimensions in Millimeters

Dimensional Tolerance:  $\pm 3\text{mm}$

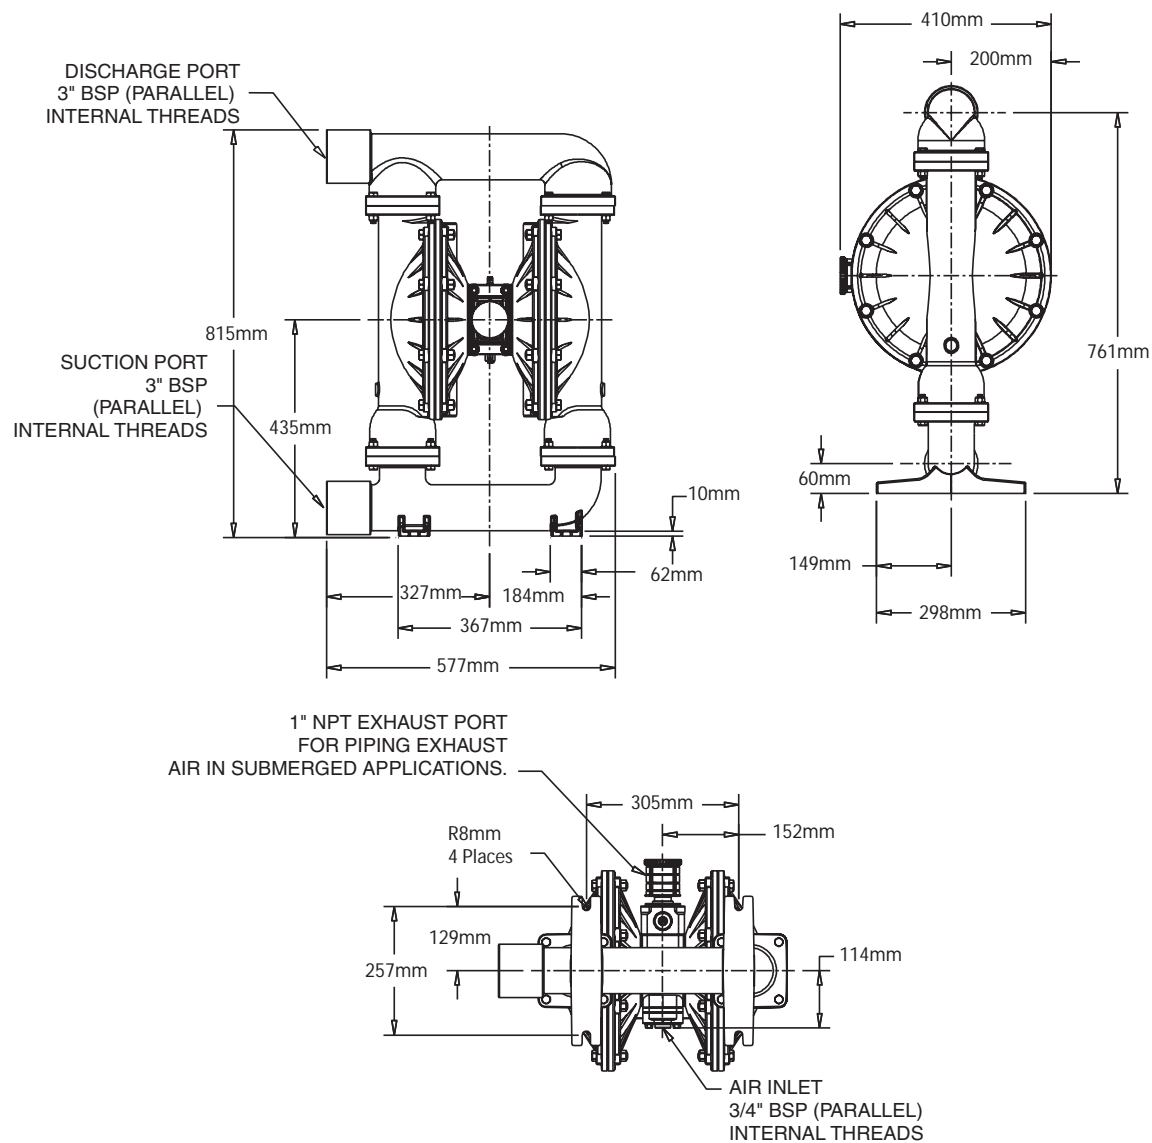


## Dimensions (Center Porting):

\*Available with Stainless Steel equipped models ONLY.

Dimensions in Millimeters

Dimensional Tolerance:  $\pm 3\text{mm}$

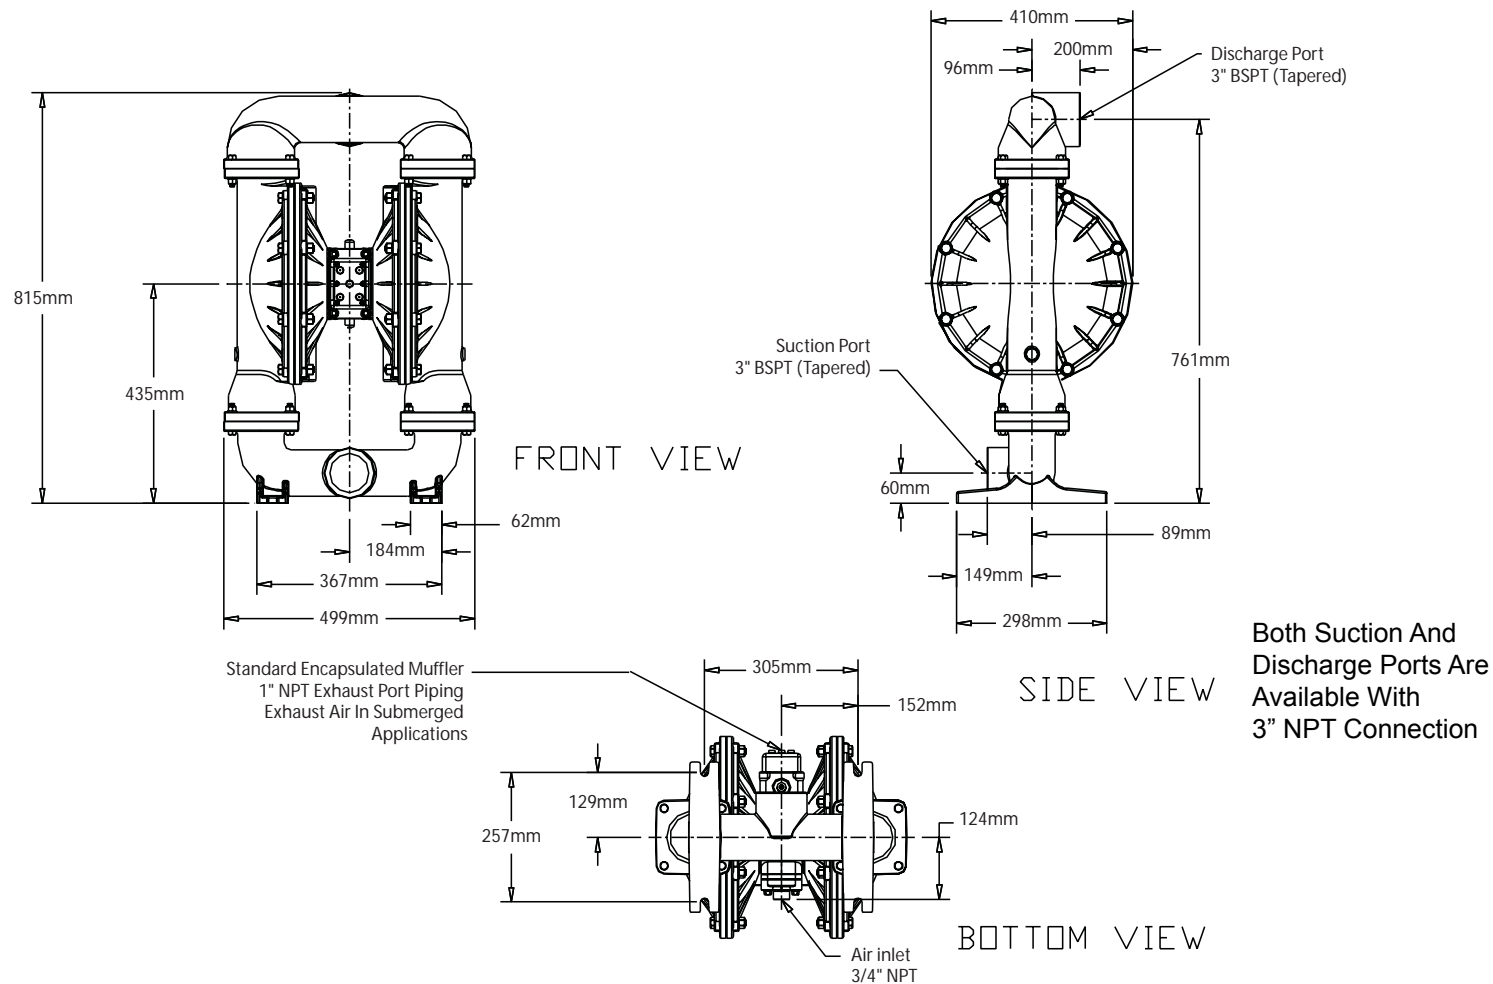

## PRINCIPLE OF PUMP OPERATION

This ball type check valve pump is powered by compressed air and is a 1:1 ratio design. The inner side of one diaphragm chamber is alternately pressurized while simultaneously exhausting the other inner chamber. This causes the diaphragms, which are connected by a common rod secured by plates to the centers of the diaphragms, to move in a reciprocating action. (As one diaphragm performs the discharge stroke the other diaphragm is pulled to perform the suction stroke in the opposite chamber.) Air pressure is applied over the entire inner surface of the diaphragm while liquid is discharged from the opposite side of the diaphragm. The diaphragm operates in a balanced condition during the discharge stroke which allows the pump to be operated at discharge heads over 200 feet (61 meters) of water.

For maximum diaphragm life, keep the pump as close to the liquid being pumped as possible. Positive suction head in excess of 10 feet of liquid (3.048 meters) may require a back pressure regulating device to maximize diaphragm life.

Alternate pressurizing and exhausting of the diaphragm chamber is performed by an externally mounted, pilot operated, four way spool type air distribution valve. When the spool shifts to one end of the valve body, inlet pressure is applied to one diaphragm chamber and the other diaphragm chamber exhausts. When the spool

shifts to the opposite end of the valve body, the pressure to the chambers is reversed. The air distribution valve spool is moved by a internal pilot valve which alternately pressurizes one end of the air distribution valve spool while exhausting the other end. The pilot valve is shifted at each end of the diaphragm stroke when a actuator plunger is contacted by the diaphragm plate. This actuator plunger then pushes the end of the pilot valve spool into position to activate the air distribution valve.

The chambers are connected with manifolds with a suction and discharge check valve for each chamber, maintaining flow in one direction through the pump.

## INSTALLATION AND START-UP

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

For installations of rigid piping, short sections of flexible hose should be installed between the pump and the piping. The flexible hose reduces vibration and strain to the pumping system. A surge suppressor is recommended to further reduce pulsation in flow.

## AIR SUPPLY

Air supply pressure cannot exceed 125 psi (8.6 bar). Connect the pump air inlet to an air supply of sufficient capacity and pressure required for desired performance. When the air

supply line is solid piping, use a short length of flexible hose not less than 1/2" (13mm) in diameter between the pump and the piping to reduce strain to the piping. The weight of the air supply line, regulators and filters must be supported by some means other than the air inlet cap. Failure to provide support for the piping may result in damage to the pump. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

## AIR VALVE LUBRICATION

The air distribution valve and the pilot valve are designed to operate WITHOUT lubrication. This is the preferred mode of operation. There may be instances of personal preference or poor quality air supplies when lubrication of the compressed air supply is required. The pump air system will operate with properly lubricated compressed air supply. Proper lubrication requires the use of an air line lubricator set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes at the point of operation. Consult the pump's published Performance Curve to determine this.

## AIR LINE MOISTURE

Water in the compressed air supply can create problems such as icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer to supplement the user's air drying

equipment. This device removes water from the compressed air supply and alleviates the icing or freezing problems.

## AIR INLET AND PRIMING

To start the pump, open the air valve approximately 1/2" to 3/4" turn. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

## BETWEEN USES



When the pump is used for materials that tend to settle out or solidify when not in motion, the pump should be flushed after each use to prevent damage. (Product remaining in the pump between uses could dry out or settle out. This could cause problems with the diaphragms and check valves at restart.) In freezing temperatures the pump must be completely drained between uses in all cases.

# INSTALLATION GUIDE

## Top Discharge Ball Unit

Available from  
Blagdon Pump

- ① PD75M Pulsation Dampener
- ② 020-052-000 Filter/Regulator
- ③ 020-052-001 Lubricator
- ④ 020-048-008 Air Dryer

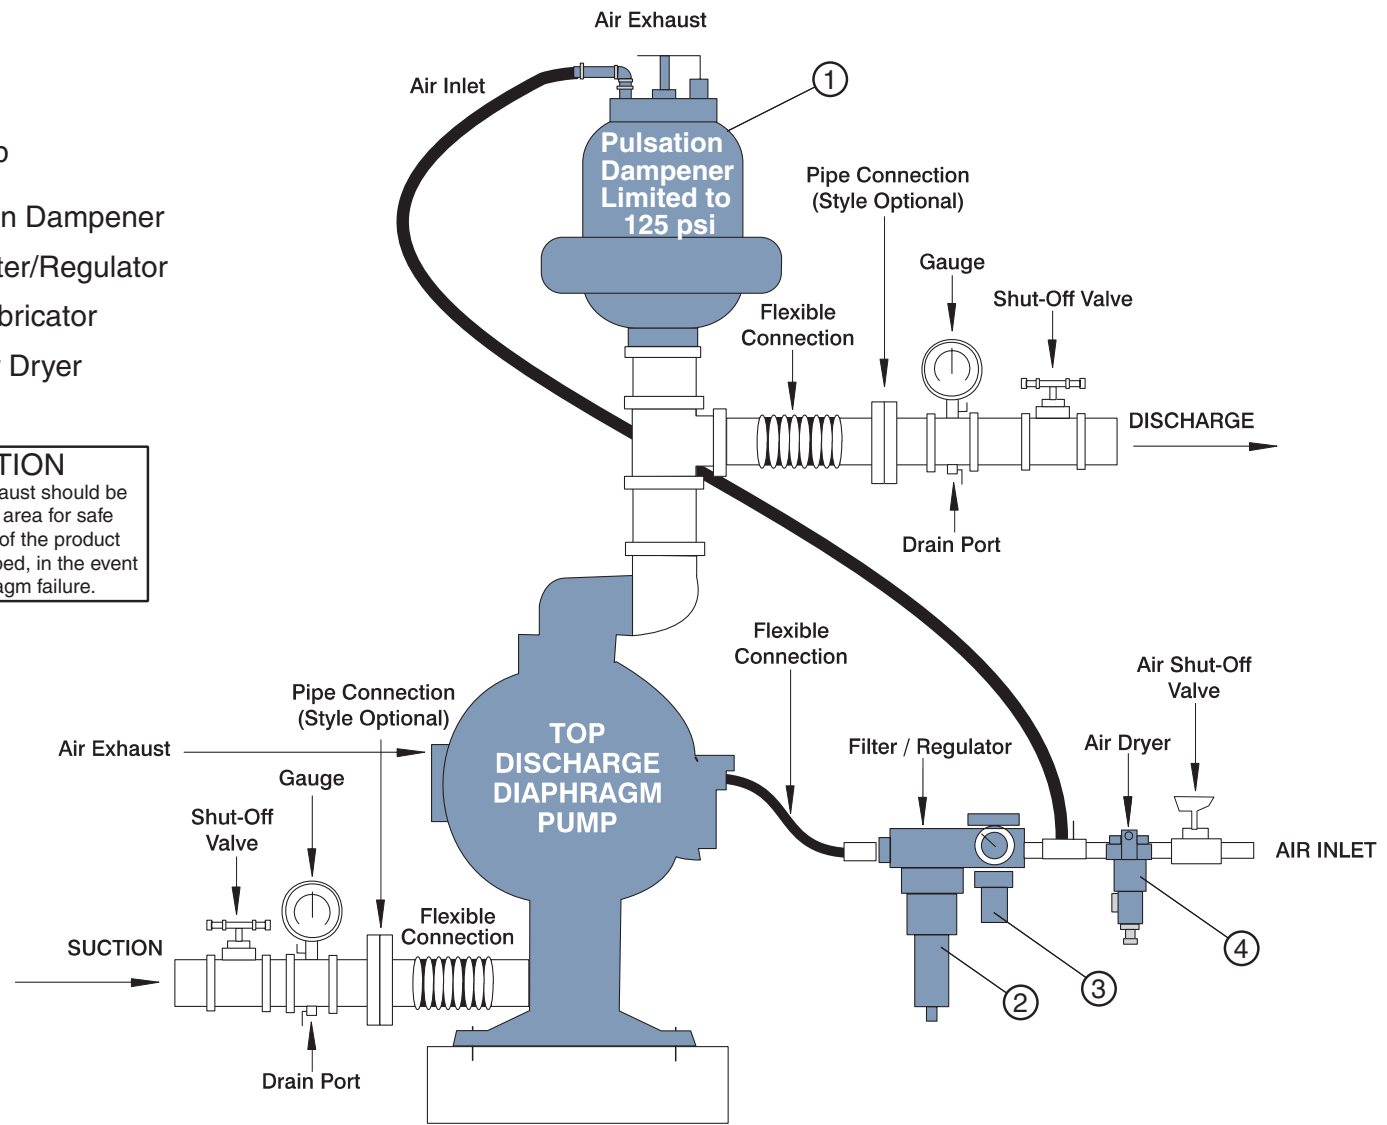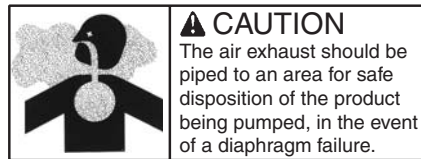

## TROUBLESHOOTING

### Possible Symptoms:

- Pump will not cycle.
- Pump cycles, but produces no flow.
- Pump cycles, but flow rate is unsatisfactory.
- Pump cycle seems unbalanced.
- Pump cycle seems to produce excessive vibration.

**What to Check:** Excessive suction lift in system.

**Corrective Action:** For lifts exceeding 20 feet (6 meters), filling the pumping chambers with liquid will prime the pump in most cases.

**What to Check:** Excessive flooded suction in system.

**Corrective Action:** For flooded conditions exceeding 10 feet (3 meters) of liquid, install a back pressure device.

**What to Check:** System head exceeds air supply pressure.

**Corrective Action:** Increase the inlet air pressure to the pump. Most diaphragm pumps are designed for 1:1 pressure ratio at zero flow.

**What to Check:** Air supply pressure or volume exceeds system head.

**Corrective Action:** Decrease inlet air pressure and volume to the pump as calculated on the published PERFORMANCE CURVE. Pump is cavitating the fluid by fast cycling.

**What to Check:** Undersized suction line.

**Corrective Action:** Meet or exceed pump connection recommendations shown on the DIMENSIONAL DRAWING.

**What to Check:** Restricted or undersized air line.

**Corrective Action:** Install a larger air line and connection. Refer to air inlet recommendations shown in your pump's SERVICE MANUAL.

**What to Check:** Check ESADS, the Externally Serviceable Air Distribution System of the pump.

**Corrective Action:** Disassemble and inspect the main air distribution valve, pilot valve and pilot valve actuators. Refer to the parts drawing and air valve section of the SERVICE MANUAL. Check for clogged discharge or closed valve before reassembly.

**What to Check:** Rigid pipe connections to pump.

**Corrective Action:** Install flexible connectors and a surge suppressor.

**What to Check:** Blocked air exhaust muffler.

**Corrective Action:** Remove muffler screen, clean or de-ice and reinstall. Refer to the Air Exhaust section of your pump SERVICE MANUAL.

**What to Check:** Pumped fluid in air exhaust muffler.

**Corrective Action:** Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. Refer to the Diaphragm Replacement section of your pump SERVICE MANUAL.

**What to Check:** Suction side air leakage or air in product.

**Corrective Action:** Visually inspect all suction side gaskets and pipe connections.

**What to Check:** Obstructed check valve.

**Corrective Action:** Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Refer to the Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Worn or misaligned check valve or check valve seat.

**Corrective Action:** Inspect check valves and seats for wear and proper seating. Replace if necessary. Refer to Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Blocked suction line.

**Corrective Action:** Remove or flush obstruction. Check and clear all suction screens and strainers.

**What to Check:** Blocked discharge line.

**Corrective Action:** Check for obstruction or closed discharge line valves.

**What to Check:** Blocked pumping chamber.

**Corrective Action:** Disassemble and inspect the wetted chambers of the pump. Remove or flush any obstructions. Refer to the pump SERVICE MANUAL for disassembly instructions.

**What to Check:** Entrained air or vapor lock in one or both pumping chambers.

**Corrective Action:** Purge chambers through tapped chamber vent plugs. PURGING THE CHAMBERS OF AIR CAN BE DANGEROUS! Contact the Technical Services Group before performing this procedure. Any model with top-ported discharge will reduce or eliminate problems with entrained air.

If your pump continues to perform below your expectations, contact your local Distributor or factory Technical Services Group for a service evaluation.

## WARRANTY

Refer to the enclosed Warranty Certificate.

# RECYCLING

Many components of Metallic AODD pumps are made of recyclable materials (see chart on page 10 for material specifications). We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed.

## IMPORTANT SAFETY INFORMATION



**IMPORTANT**  
Read these safety warnings and instructions in this manual completely, before installation and start-up of the pump. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.



**CAUTION**  
Before pump operation, inspect all gasketed fasteners for looseness caused by gasket creep. Re-torque loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



**WARNING**  
Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. The discharge line may be pressurized and must be bled of its pressure.



**WARNING**  
In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product which is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe disposition.



**WARNING**  
Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded. (See page 21)



**WARNING**  
This pump is pressurized internally with air pressure during operation. Always make certain that all bolting is in good condition and that all of the correct bolting is reinstalled during assembly.



**WARNING**  
When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



**WARNING**  
Before doing any maintenance on the pump, be certain all pressure is completely vented from the pump, suction, discharge, piping, and all other openings and connections. Be certain the air supply is locked out or made non-operational, so that it cannot be started while work is being done on the pump. Be certain that approved eye protection and protective clothing are worn all times in the vicinity of the pump. Failure to follow these recommendations may result in serious injury or death.



**WARNING**  
Airborne particles and loud noise hazards. Wear ear and eye protection.

# MATERIAL CODES

## The Last 3 Digits of Part Number

000 .....Assembly, sub-assembly; and some purchased items	175 ..... Die Cast Zinc	374 .....Carboxylated Nitrile	603 .....Blue Gylon
010 ..... Cast Iron	180 ..... Copper Alloy	375 .....Fluorinated Nitrile	604 .....PTFE
012 .....Powered Metal	305 ..... Carbon Steel, Black Epoxy Coated	378 .....High Density Polypropylene	606 .....PTFE
015 .....Ductile Iron	306 ..... Carbon Steel, Black PTFE Coated	379 .....Conductive Nitrile	607 .....Envelon
020 .....Ferritic Malleable Iron	307 ..... Aluminum, Black Epoxy Coated	405 .....Cellulose Fibre	608 .....Conductive PTFE
025 .....Music Wire	308 ..... Stainless Steel, Black PTFE Coated	408 .....Cork and Neoprene	610 .....PTFE Encapsulated Silicon
080 .....Carbon Steel, AISI B-1112	309 ..... Aluminum, Black PTFE Coated	425 .....Compressed Fibre	611 .....PTFE Encapsulated FKM
100 .....Alloy 20	310 ..... Kynar® Coated	426 .....Blue Gard	632 .....Neoprene/Hytrel
110 .....Alloy Type 316 Stainless Steel	330 ..... Zinc Plated Steel	440 .....Vegetable Fibre	633 .....FKM/PTFE
111 .....Alloy Type 316 Stainless Steel (Electro Polished)	331 ..... Chrome Plated Steel	465 .....Fibre	634 .....EPDM/PTFE
112 .....Alloy "C" (Hastelloy equivalent)	332 ..... Aluminum, Electroless Nickel Plated	500 .....Delrin 500	635 .....Neoprene/PTFE
113 .....Alloy Type 316 Stainless Steel (Hand Polished)	333 ..... Carbon Steel, Electroless Nickel Plated	501 .....Delrin 570	637 .....PTFE , FKM/PTFE
114 .....303 Stainless Steel	335 ..... Galvanized Steel	502 .....Conductive Acetal, ESD-800	638 .....PTFE , Hytrel/PTFE
115 .....302/304 Stainless Steel	336 ..... Zinc Plated Yellow Brass	503 .....Conductive Acetal, Glass-Filled	639 .....Nitrile/TFE
117 .....440-C Stainless Steel (Martensitic)	337 ..... Silver Plated Steel	505 .....Acrylic Resin Plastic	643 .....Santoprene®/EPDM
120 .....416 Stainless Steel (Wrought Martensitic)	340 ..... Nickel Plated	506 .....Delrin 150	644 .....Santoprene®/PTFE
123 .....410 Stainless Steel (Wrought Martensitic)	342 ..... Filled Nylon	520 .....Injection Molded PVDF Natural color	656 .....Santoprene Diaphragm and Check Balls/EPDM Seats
148 .....Hardcoat Anodized Aluminum	353 ..... Geolast; Color: Black	540 .....Nylon	
149 .....2024-T4 Aluminum	354 ..... Injection Molded #203-40 Santoprene- Duro 40D +/-5; Color: RED	541 .....Nylon	
150 .....6061-T6 Aluminum	355 ..... Thermal Plastic	542 .....Nylon	
151 .....6063-T6 Aluminum	356 ..... Hytrel	544 .....Nylon Injection Molded	
152 .....2024-T4 Aluminum (2023-T351)	357 ..... Injection Molded Polyurethane	550 .....Polyethylene	
154 .....Almag 35 Aluminum	358 ..... Urethane Rubber (Some Applications) (Compression Mold)	551 .....Glass Filled Polypropylene	
155 .....356-T6 Aluminum	359 ..... Urethane Rubber	552 .....Unfilled Polypropylene	
156 .....356-T6 Aluminum	360 ..... Nitrile Rubber. Color coded: RED	553 .....Unfilled Polypropylene	
157 .....Die Cast Aluminum Alloy #380	361 ..... Nitrile	555 .....Polyvinyl Chloride	
158 .....Aluminum Alloy SR-319	363 ..... FKM (Fluorel). Color coded: YELLOW	556 .....Black Vinyl	
159 .....Anodized Aluminum	364 ..... E.P.D.M. Rubber. Color coded: BLUE	558 .....Conductive HDPE	
162 .....Brass, Yellow, Screw Machine Stock	365 ..... Neoprene Rubber. Color coded: GREEN	570 .....Rulon II	
165 .....Cast Bronze, 85-5-5-5	366 ..... Food Grade Nitrile	580 .....Ryton	
166 .....Bronze, SAE 660	368 ..... Food Grade EPDM	590 .....Valox	
170 .....Bronze, Bearing Type, Oil Impregnated	370 ..... Butyl Rubber. Color coded: BROWN	591 .....Nylatron G-S	
	371 ..... Philthane (Tuftane)	592 .....Nylatron NSB	
		600 .....PTFE (virgin material) Tetrafluorocarbon (TFE)	
		601 .....PTFE (Bronze and moly filled)	
		602 .....Filled PTFE	

Delrin, FKM and Hytrel are registered tradenames of E.I. DuPont. Gylon is a registered tradename of Garlock, Inc. Nylatron is a registered tradename of Polymer Corp. Santoprene is a registered tradename of Exxon Mobil Corp. Rulon II is a registered tradename of Dixon Industries Corp. Ryton is a registered tradename of Phillips Chemical Co. Valox is a registered tradename of General Electric Co.




# Composite Repair Parts Drawing

## AVAILABLE SERVICE AND CONVERSION KITS

- B476-227-000 AIR END KIT (Aluminum)**  
Seals, O-ring, Gaskets, Retaining Rings, Air Valve  
Sleeve and Spool Set, and Pilot Valve Assembly
- B476-185-360 WET END KIT**  
Nitrile Diaphragms, Balls, and Seats.
- B476-185-656 WET END KIT**  
Santoprene Diaphragms, Balls and EPDM Seats.
- B476-185-364 WET END KIT**  
EPDM Diaphragms, Balls and Seats.
- B476-185-365 WET END KIT**  
Neoprene Diaphragms, Balls, and Seats.
- B476-185-633 WET END KIT**  
FKM Diaphragms, PTFE Balls and PTFE Seats.
- B476-185-635 WET END KIT**  
Neoprene Diaphragms, PTFE Overlay,  
PTFE Balls and PTFE Seats.

## HARDWARE KITS


- B476-197-330** Zinc Plated Capscrews, Washers, and Hex Nuts

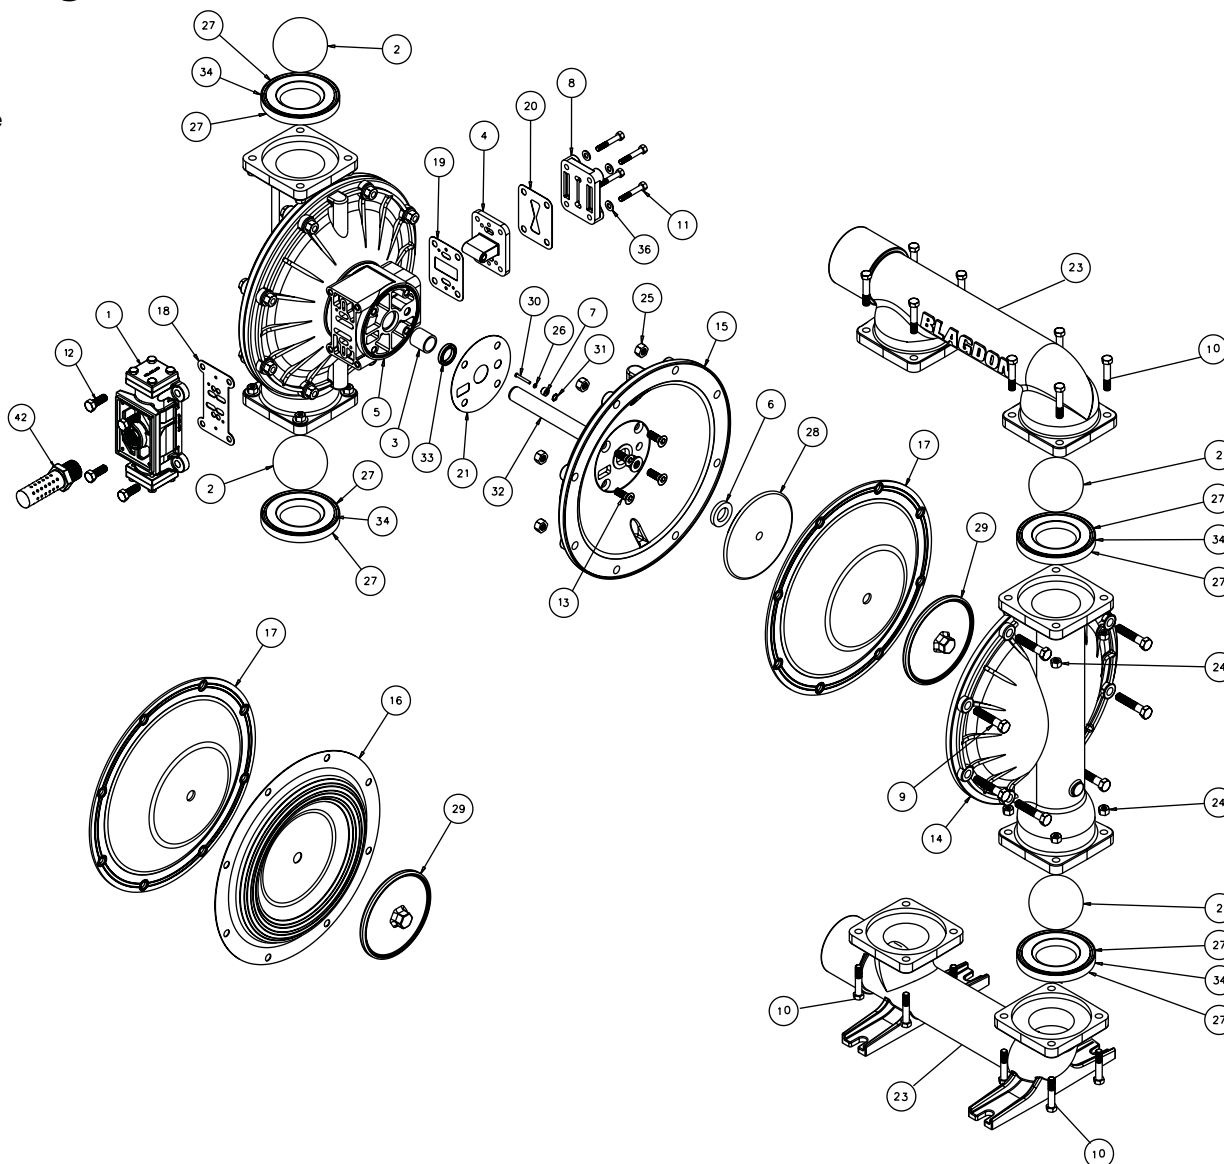

ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
1	B031-183-000	Air Valve Assembly	1	20	B360-104-379	Gasket, Air Inlet	1
	B031-179-000	Air Valve Assembly (Cast Iron & Stainless Steel Centers Only)	1	21	B360-105-360	Gasket, Inner Chamber	2
2	B050-014-354	Ball, Check	4	22	B518-155-156E	Manifold, Suction 3" BSP Parallel	1
	B050-014-360	Ball, Check	4		B518-155-010E	Manifold, Suction 3" BSP Parallel	1
	B050-014-364	Ball, Check	4		B518-143-110	Manifold, Suction 3" NPT (Center Ported Only)*	1
	B050-014-365	Ball, Check	4		B518-143-110E	Manifold, Suction 3" BSPT (Center Ported Only) *	1
	B050-015-600	Ball, Check	4	23	B518-156-156E	Manifold, Discharge 3" BSP Parallel	1
3	B070-006-170	Bushing	2		B518-156-010E	Manifold, Discharge 3" BSP Parallel	1
4	B095-110-000	Pilot Valve Assembly	1		B518-144-110	Manifold, Discharge 3" NPT (Center Ported Only)*	1
	B095-110-110	Pilot Valve Assembly (Stainless Steel Centers Only)	1		B518-144-110E	Manifold, Discharge 3" BSPT (Center Ported Only)*	1
	B095-110-558	Pilot Valve Assembly (Cast Iron Centers Only)	1				
5	B114-024-157	Intermediate Bracket	1	24	B545-007-115	Nut, Hex 7/16-14	16
	B114-024-010	Intermediate Bracket	1		B545-007-330	Nut, Hex 7/16-14	16
	B114-024-110	Intermediate Bracket	1	25	B545-008-115	Nut, Hex 1/2-13	16
6	B132-035-360	Bumper, Diaphragm	2		B545-008-330	Nut, Hex 1/2-13	16
7	B135-034-506	Bushing, Plunger	2	26	B560-001-360	O-Ring	2
8	B165-113-157	Cap, Air Inlet Assembly	1	27	B560-105-360	Seal (O-Ring) (See item 34)	8
	B165-113-010	Cap, Air Inlet Assembly	1		B560-105-363	Seal (O-Ring) (See item 34)	8
	B165-113-110	Cap, Air Inlet Assembly	1		B560-105-364	Seal (O-Ring) (See item 34)	8
9	B170-055-115	Capscrew, Hex Hd 1/2-13 X 2.50	16		B560-105-365	Seal (O-Ring) (See item 34)	8
	B170-055-330	Capscrew, Hex Hd 1/2-13 X 2.50	16		B720-055-608	Seal (O-Ring) (See item 34)	8
10	B170-060-115	Capscrew, Hex Hd 7/16-14 X 2.00	16	28	B612-192-157	Plate, Inner Diaphragm Assembly	2
	B170-060-330	Capscrew, Hex Hd 7/16-14 X 2.00	16		B612-192-010	Plate, Inner Diaphragm Assembly	2
11	B170-069-115	Capscrew, Hex Hd 5/16-18 X 1.75	4		B612-192-334	Plate, Inner Diaphragm Assembly	2
	B170-069-330	Capscrew, Hex Hd 5/16-18 X 1.75	4	29	B612-194-157	Plate, Outer Diaphragm Assembly	2
12	B170-006-115	Capscrew, Hex HD 3/8-16 X 1.00	4		B612-194-010	Plate, Outer Diaphragm Assembly	2
	B170-006-330	Capscrew, Hex HD 3/8-16 X 1.00	4		B612-194-110	Plate, Outer Diaphragm Assembly	2
13	B171-059-115	Capscrew, Soc Hd 7/16-14 X 1.25	8		B612-194-112	Plate, Outer Diaphragm Assembly	2
	B171-059-330	Capscrew, Soc Hd 7/16-14 X 1.25	8	30	B620-020-115	Plunger, Actuator	2
	B171-011-110	Capscrew, Soc Hd 1/2-13X 1.25 (SS Centers Only)	8	31	B675-042-115	Ring, Retaining	2
14	B196-164-156	Chamber, Outer	2	32	B685-040-120	Rod, Diaphragm	1
	B196-164-010	Chamber, Outer	2	33	B720-004-360	Seal, Diaphragm Rod	2
	B196-164-110	Chamber, Outer	2	34	B722-090-360	Seat, Check Ball	4
	B196-164-112	Chamber, Outer	2		B722-090-363	Seat, Check Ball	4
15	B196-165-156	Chamber, Inner	2		B722-090-364	Seat, Check Ball	4
	B196-165-010	Chamber, Inner	2		B722-090-365	Seat, Check Ball	4
	B196-165-110	Chamber, Inner	2		B722-090-600	Seat, Check Ball	4
16	B286-098-604	Diaphragm, Overlay	2		B722-090-080	Seat, Check Ball (seals required see item 27)	4
17	B286-098-360	Diaphragm	2		B722-090-110	Seat, Check Ball (seals required see item 27)	4
	B286-098-363	Diaphragm	2		B722-090-150	Seat, Check Ball (seals required see item 27)	4
	B286-098-354	Diaphragm	2	35	B901-038-115	5/16 Flat Washer	4
	B286-098-365	Diaphragm	2		B901-038-330	5/16 Flat Washer	4
18	B360-093-360	Gasket, Air Valve	1	36	B901-048-115	3/8 Flat Washer (Stroke Indicator Only)	4
19	B360-103-360	Gasket, Pilot Valve	1		B901-048-330	3/8 Flat Washer (Stroke Indicator Only)	4
				42	B530-033-000	Metal Muffler (ATEX compliant)	1

\*Available with Stainless Steel equipped models ONLY.

# Air Valve Servicing, Assembly Drawing & Parts List

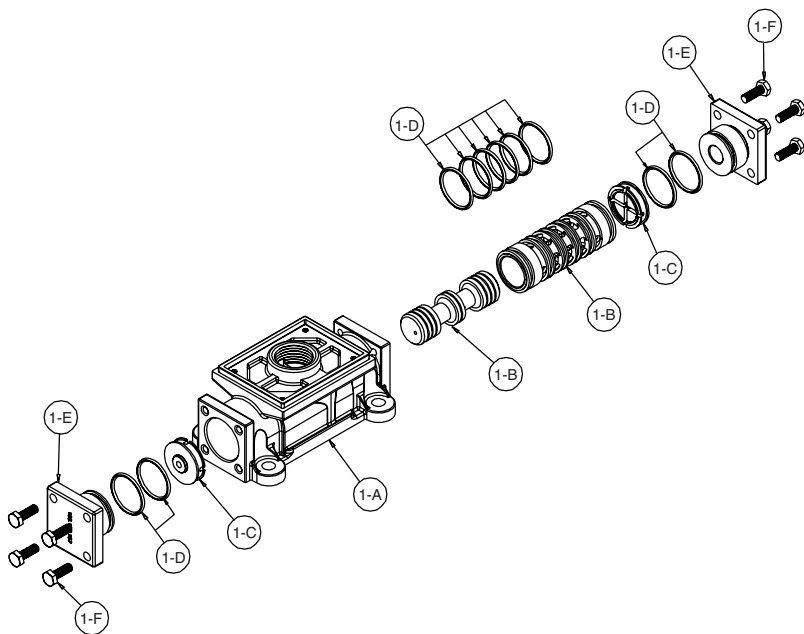

## Air Distribution Valve Servicing

To service the air valve first shut off the compressed air, bleed pressure from the pump, and disconnect the air supply line from the pump.

**Step #1:** See COMPOSITE REPAIR PARTS DRAWING.

Using a 9/16" wrench or socket, remove the four hex capscrews (items 12). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 18) for cracks or damage. Replace gasket if needed.

**Step #2:** Disassembly of the air valve.

Using a 7/16" wrench or socket, remove the eight hex capscrews (items 1-F) that

fasten the end caps to the valve body. Next remove the two end caps (items 1-E). Inspect the two o-rings (items 1-D) on each end cap for damage or wear. Replace the bumpers as needed.

Remove the bumpers (items 1-C). Inspect the bumpers for damage or wear. Replace the bumpers as needed.

Remove the spool (part of item 1-B) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-B) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace with a new sleeve and spool set (item 1-B).

## Air Valve Assembly Parts List (Use w/Aluminum centers only)

Item	Part Number	Description	Qty
1	031-183-000	Air Valve Assembly	1
1-A	095-109-157	Body, Air Valve	1
1-B	031-139-000	Sleeve and Spool Set	1
1-C	132-029-357	Bumper	2
1-D	560-020-360	O-Ring	10
1-E	165-127-157	Cap, End	2
1-F	170-032-330	Hex Head Capscrew 1/4-20 x .75	8

## Air Valve Assembly Parts List (Use w/Cast Iron centers only)

Item	Part Number	Description	Qty
1	031-179-000	Air Valve Assembly	1
1-A	095-109-110	Body, Air Valve	1
1-B	031-139-000	Sleeve and Spool Set	1
1-C	132-029-357	Bumper	2
1-D	560-020-379	O-Ring	10
1-E	165-127-110	Cap, End	2
1-F	170-032-115	Hex Head Capscrew 1/4-20 x .75	8


**Step #3:** Reassembly of the air valve.

Install one bumper (item 1-C) and one end cap (item 1-E), with two o-rings (items 1-D), and fasten with four hex capscrews (items 1-F) to the valve body (item 1-A).

Remove the new sleeve and spool set (item 1-B) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-D) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-A), align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Carefully insert the sleeve into the bumper and end cap

(with o-rings) and fasten with the remaining hex capscrews.

Fasten the air valve assembly (item 1) and gasket to the pump. Connect the compressed air line to the pump. The pump is now ready for operation.

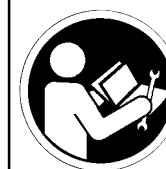


## IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

# Diaphragm Service Drawing, with Overlay

# Diaphragm Service Drawing, Non-Overlay

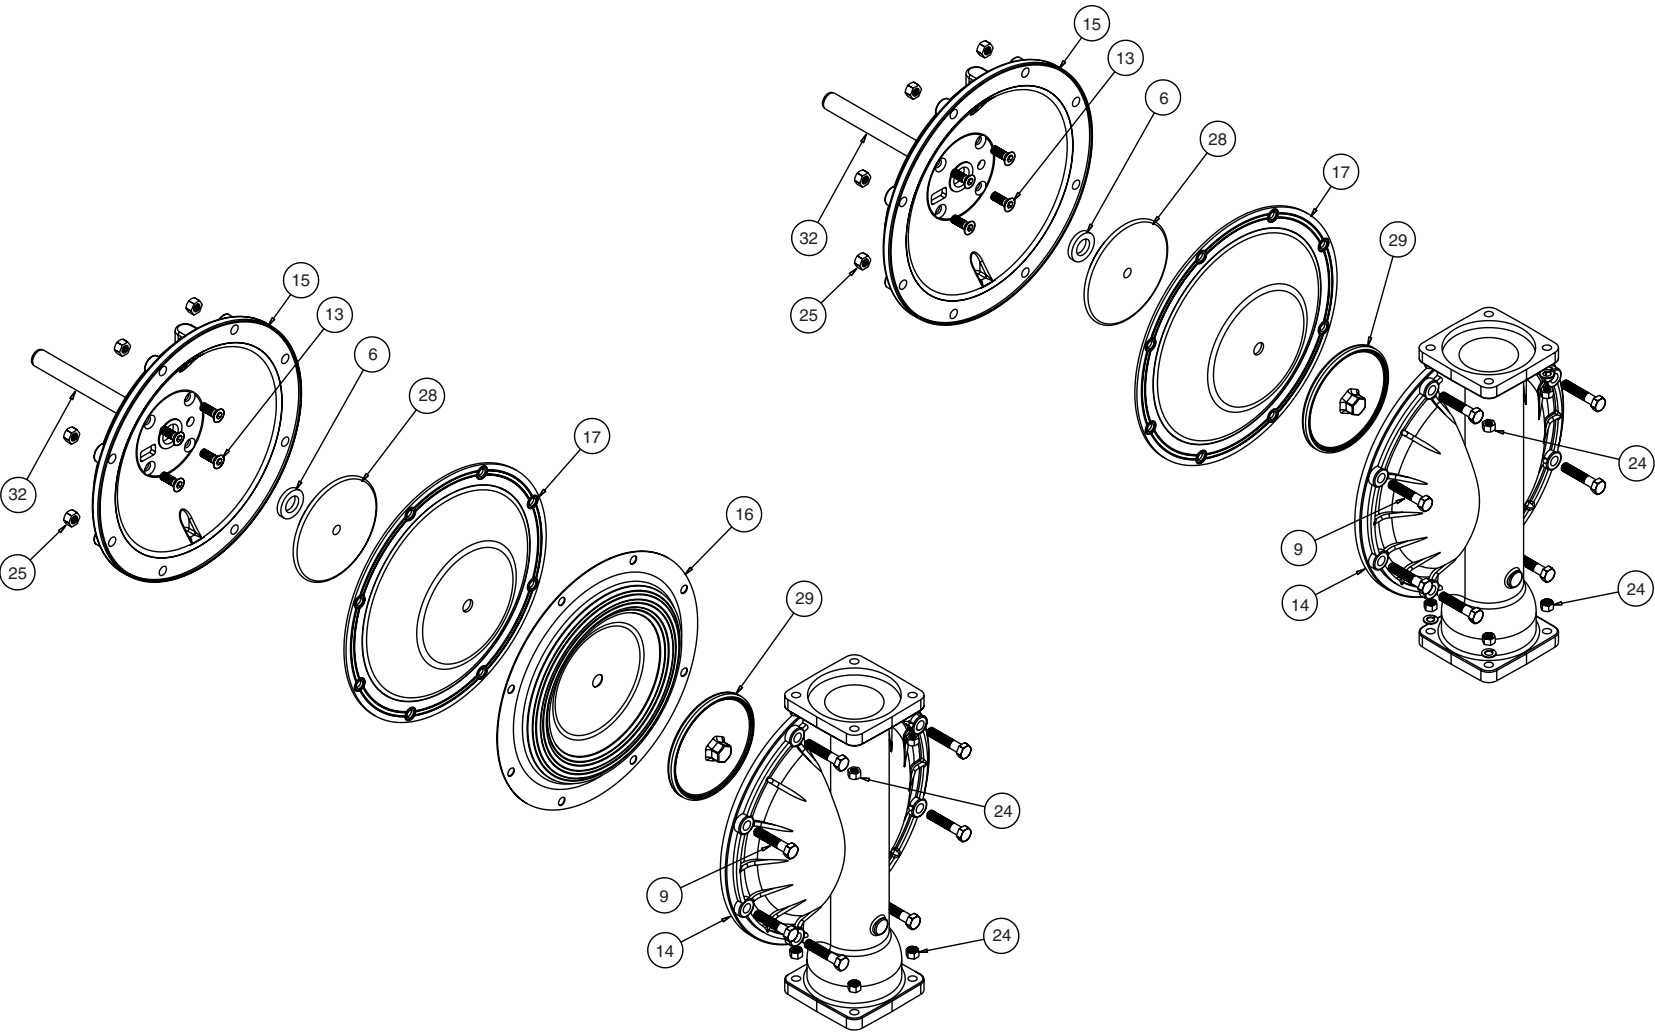

## DIAPHRAGM SERVICING

To service the diaphragms first shut off the suction, then shut off the discharge lines to the pump. Shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining liquid from the pump.

**Step #1:** See the pump assembly drawing, and the diaphragm servicing illustration.

Using a 9/16" wrench or socket, remove the 16 capscrews (item 10), and hex nuts that fasten the manifolds (items 22 & 23) to the outer chambers (item 14).

**Step #2:** Removing the outer chambers.

Using a 11/16" and a 5/8" wrench or socket, remove the 16 capscrews (items 9), and hex nuts that fasten the outer chambers, diaphragms, and inner chambers (items 15) together.

**Step #3:** Removing the diaphragm assemblies.

Use a 1<sup>1</sup>/<sub>16</sub>" (27mm) wrench or six pointed socket to remove the diaphragm assemblies (outer plate, diaphragm, and inner plate) from the diaphragm rod (item 32) by turning counterclockwise.

**NOTE:** To uninstall the diaphragm plates from the diaphragm, hold the inner diaphragm plate using one of two methods:

**Preferred Method:** Place the assembled plates and diaphragm in a large vise, gripping on the exterior cast diameter of the inner diaphragm plate (see the drawing at far right).

**Alternate Method:** When a larger vise is not available, insert a 1/4 - 20UNC hex capscrew or setscrew (standard hardware) into the tapped hole in the inner diaphragm plate. Insert the assembled plates and diaphragm into a vise with the stud from the outer plate and the 1/4 - 20 fastener loosely between the jaws of the vise (see illustration at right).

Use a 1<sup>1</sup>/<sub>16</sub>" wrench or socket to remove the outer diaphragm plate (item 29) by turning counterclockwise. Inspect the diaphragm (item 17) for cuts, punctures, abrasive wear or chemical attack. Replace the diaphragms if necessary.

**Step #4:** Installing the diaphragms.

Push the threaded stud of the outer diaphragm plate through the center hole of the diaphragm. Thread the inner plate clockwise onto the stud. Use one of the two methods for holding the inner diaphragm plate that was described in prior note in step #3. Use a torque wrench to tighten the diaphragm assembly together to 50 ft. lbs. (67.79 Newton meters). Allow a minimum of 15 minutes to elapse after torquing, then re-torque the assembly to compensate for stress relaxation in the clamped assembly.

**Step #5:** Installing the diaphragm assemblies to the pump.

Make sure the bumper (item 6) is installed over the diaphragm rod.

Thread the stud of the one diaphragm assembly clockwise into the tapped hole at the end of the diaphragm rod (item 32) until the inner diaphragm plate is flush to the end of the rod. Insert rod into pump.

Align the bolt holes in the diaphragm with the bolt pattern in the inner chamber (item 15).

Fasten the outer chamber (item 14) to the pump, using the capscrews (items 9), and hex nuts.

On the opposite side of the pump, pull the diaphragm rod out as far as possible. Make sure the bumper (item 6) is installed over the diaphragm rod.

Thread the stud of the remaining diaphragm assembly clockwise into the tapped hole at the end of the diaphragm rod (item 32) as far as possible and still allow for alignment of the bolt holes in the diaphragm with the bolt pattern in the inner chamber (item 15).

Fasten the remaining outer chamber (item 14) to the pump, using the capscrews (items 9), and hex nuts.

**Step #6:** Re-install the manifolds to the pump, using the capscrews (items 10), hex nuts and flat washers.



## IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*


The pump is now ready to be re-installed, connected and returned to operation.

## OVERLAY DIAPHRAGM SERVICING


The overlay diaphragm (item 16) is designed to fit over the exterior of the standard TPE diaphragm (item 17).

The molded directional arrows on the overlay diaphragm must point vertically.

Follow the same procedures described for the standard diaphragm for removal and installation.

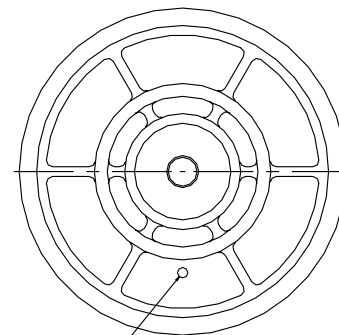

Alternate Method:  
Install 1/4 - 20UNC fastener  
into tapped hole.

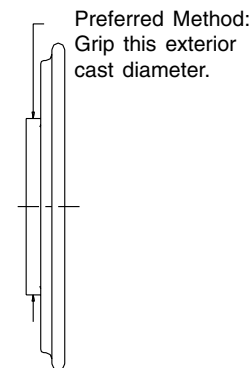

# Pilot Valve Servicing, Assembly Drawing & Parts List

## PILOT VALVE ASSEMBLY PARTS LIST

ITEM	PART NUMBER	DESCRIPTION	QTY
4	095-110-000	Pilot Valve Assembly	1
4-A	095-095-157	Valve Body	1
4-B	755-051-000	Sleeve (With O-rings)	1
4-C	560-033-379	O-ring (Sleeve)	6
4-D	775-055-000	Spool (With O-rings)	1
4-E	560-023-379	O-ring (Spool)	3
4-F	675-037-080	Retaining Ring	1

## FOR PUMPS WITH CAST IRON CENTER SECTION


ITEM	PART NUMBER	DESCRIPTION	QTY
4	095-110-558	Pilot Valve Assembly	1
4-A	095-095-558	Valve Body	1

(includes all other items used on 095-110-000)

## FOR PUMPS WITH STAINLESS STEEL CENTER SECTION

ITEM	PART NUMBER	DESCRIPTION	QTY
4	095-110-110	Pilot Valve Assembly	1
4-A	095-095-110	Valve Body	1

(includes all other items used on 095-110-000)

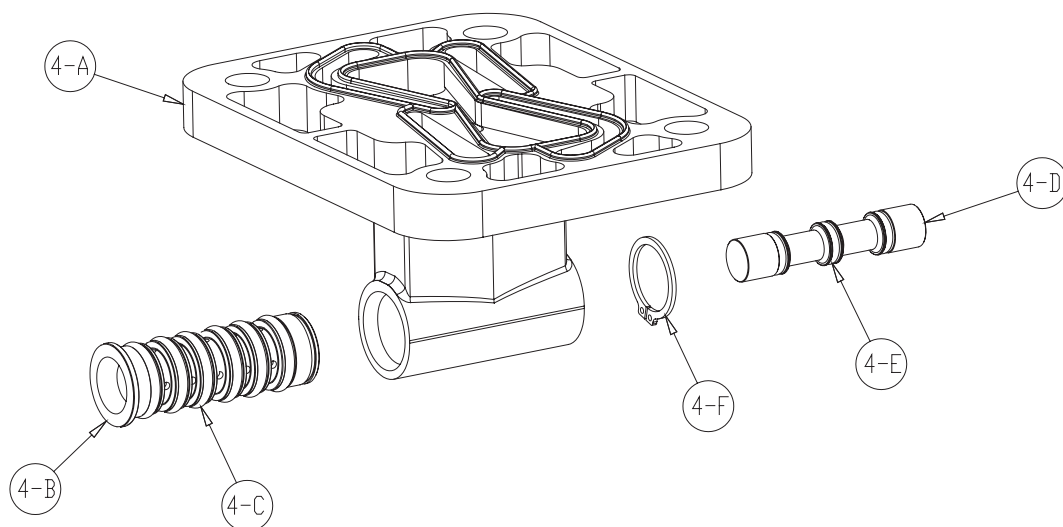

## PILOT VALVE SERVICING

To service the pilot valve first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

**STEP #1:** See pump assembly drawing.

Using a 1/2" wrench or socket, remove the four capscrews (item 11). Remove the air inlet cap (item 8) and air inlet gasket (item 21). The pilot valve assembly (item 4) can now be removed for inspection and service.

**STEP #2:** Disassembly of the pilot valve.

Remove the pilot valve spool (item 4-D). Wipe clean and inspect spool and o-rings for dirt, cuts or wear. Replace the o-rings and spool if necessary.

Remove the retaining ring (item 4-F) from the end of the sleeve (item 4-B) and remove the sleeve from the valve body (item 4-A). Wipe clean and inspect sleeve and o-rings for dirt, cuts or wear. Replace the o-rings and sleeve if necessary.

**STEP #3:** Re-assembly of the pilot valve.

Generously lubricate outside diameter of the sleeve and o-rings. Then carefully insert sleeve into valve body. Take CAUTION when inserting sleeve, not to shear any o-rings. Install retaining ring to sleeve. Generously lubricate outside diameter of spool and o-rings. Then carefully insert spool into sleeve. Take CAUTION when inserting spool, not to shear any o-rings. Use BP-LS-EP-2 multipurpose grease, or equivalent.

**STEP #4:** Re-install the pilot valve assembly into the intermediate.

Be careful to align the ends of the pilot valve stem between the plunger pins when inserting the pilot valve into the cavity of the intermediate.

Re-install the gasket, air inlet cap and capscrews. Connect the air supply to the pump. The pump is now ready for operation.

## ACTUATOR PLUNGER SERVICING

To service the actuator plunger first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

**Step #1:** See PUMP ASSEMBLY DRAWING.

Using a 1/2" wrench or socket, remove the four capscrews (items 11). Remove the air inlet cap (item 8) and air inlet gasket (item 20). The pilot valve assembly (item 4) can now be removed.

**Step #2:** Inspect the actuator plungers.

See ILLUSTRATION AT RIGHT.

The actuator plungers (items 30) can be reached through the pilot valve cavity in the intermediate assembly (item 5).

Remove the plungers (item 30) from the bushings (item 7) in each end of the cavity. Inspect the installed o-ring (items 26) for cuts and/or wear. Replace the o-rings if necessary. Apply a light coating of grease to each o-ring and re-install the plungers in to the bushings. Push the plungers in as far as they will go.

To remove the bushings (item 7), first remove the retaining rings (item 31) by using a flat screwdriver.

**NOTE:** It is recommended that new retaining rings be installed.



**Step #3:** Re-install the pilot valve assembly into the intermediate assembly.

Be careful to align the ends of the stem between the plungers when inserting the stem of the pilot valve into the cavity of the intermediate.

Re-install the gasket (item 20), air inlet cap (item 8) and capscrews (item 11).

Connect the air supply to the pump. The pump is now ready for operation.

## ACTUATOR PLUNGER SERVICING

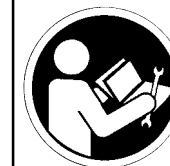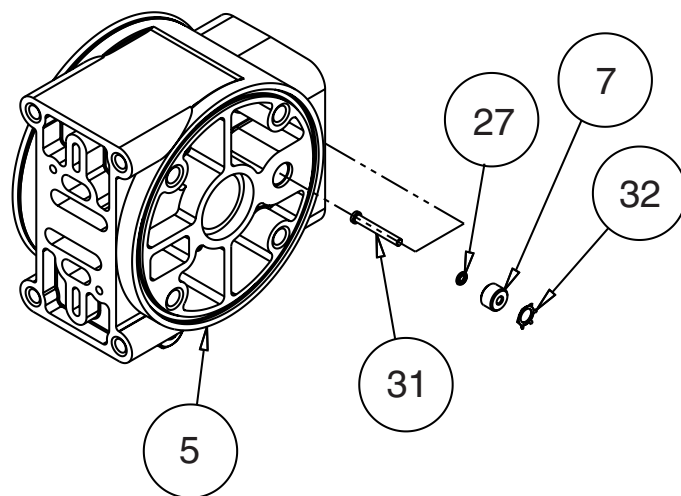

## ! IMPORTANT

*Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.*

## CHECK VALVE SERVICING

Before servicing the check valve components, first shut off the suction line and then the discharge line to the pump. Next, shut off the compressed air supply, bleed air pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining fluid from the pump. The pump can now be removed for service.

To access the check valve components, remove the manifold (item 23 or item 22 not shown). Use a 9/16" wrench or socket to remove the fasteners. Once the manifold is removed, the check valve components can be seen.

Inspect the check balls (items 2) for wear, abrasion, or cuts on the spherical surface. The check valve seats (item 34) should be inspected for cuts, abrasive wear, or embedded material on the surfaces of both the external and internal chambers. The spherical surface of the check balls must seat flush to the surface of the check valve seats for the pump to operate to peak efficiency. Replace any worn or damaged parts as necessary.


Re-assemble the check valve components. The seat should fit into the counter bore of the outer chamber.

The pump can now be reassembled, reconnected and returned to operation.

## METALLIC SEATS

Two o-rings (or conductive PTFE seals) (item 27) are required for metallic seats.

## Check Valve Drawing

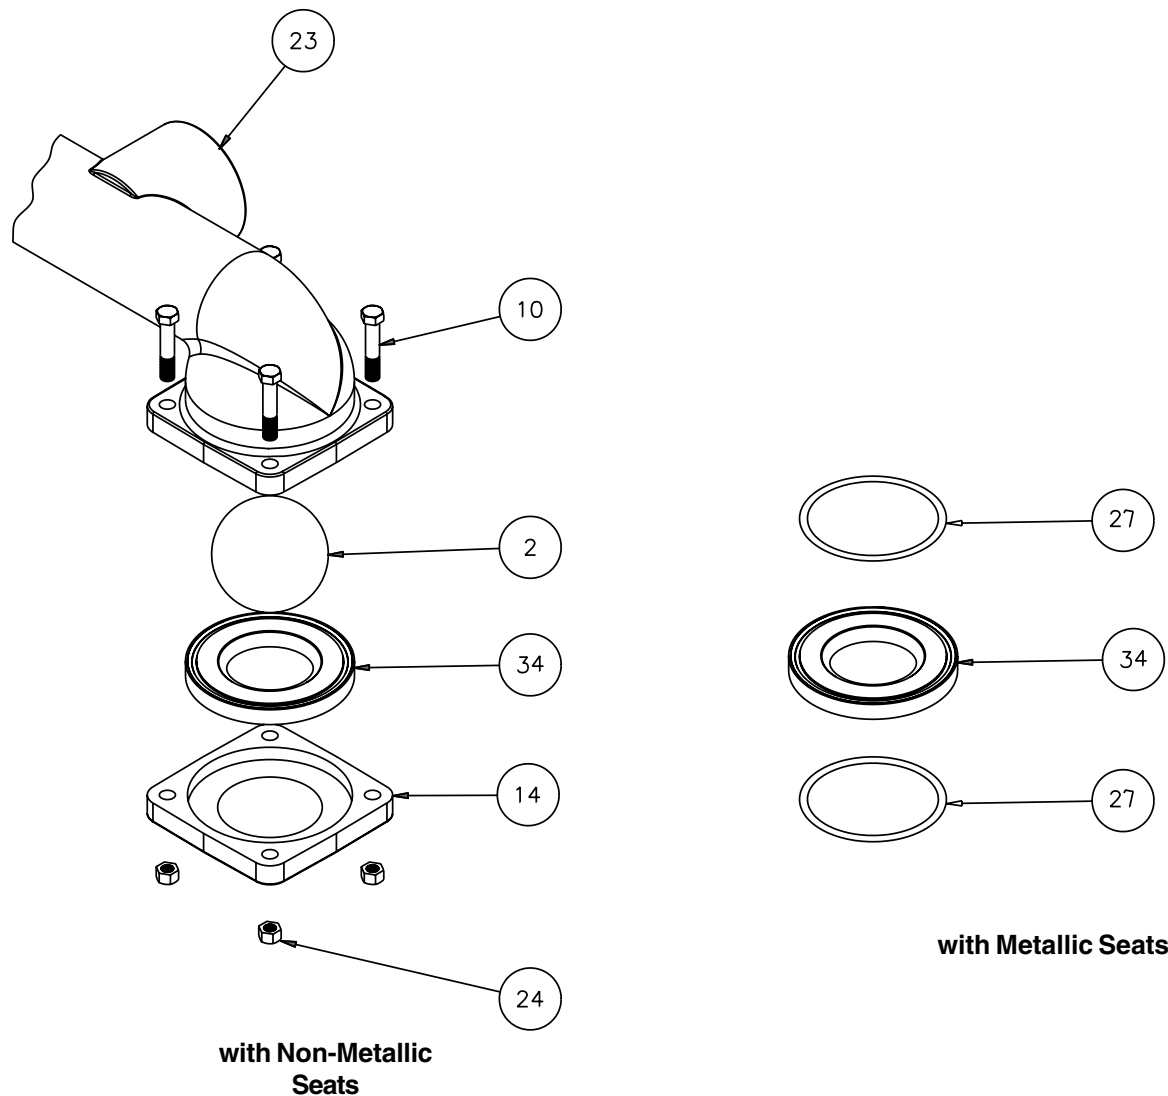

## PUMPING HAZARDOUS LIQUIDS

When a diaphragm fails, the pumped liquid or fumes enter the air end of the pump. Fumes are exhausted into the surrounding environment. When pumping hazardous or toxic materials, the exhaust air must be piped to an appropriate area for safe disposal. See illustration #1 at right.

This pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. See illustration #2 at right. Piping used for the air exhaust must not be smaller than 1" (2.54 cm) diameter. Reducing the pipe size will restrict air flow and reduce pump performance. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills. See illustration #3 at right.

## CONVERTING THE PUMP FOR PIPING THE EXHAUST AIR


The following steps are necessary to convert the pump to pipe the exhaust air away from the pump.

Remove the muffler (item 42). The air distribution valve (item 1) has 1" NPT threads for piped exhaust.


## IMPORTANT INSTALLATION

**NOTE:** The manufacturer recommends installing a flexible conductive hose or connection between the pump and any rigid plumbing. This reduces stresses on the molded threads of the air exhaust port. Failure to do so may result in damage to the air distribution valve body.


Any piping or hose connected to the pump's air exhaust port must be conductive and physically supported. Failure to support these connections could also result in damage to the air distribution valve body.

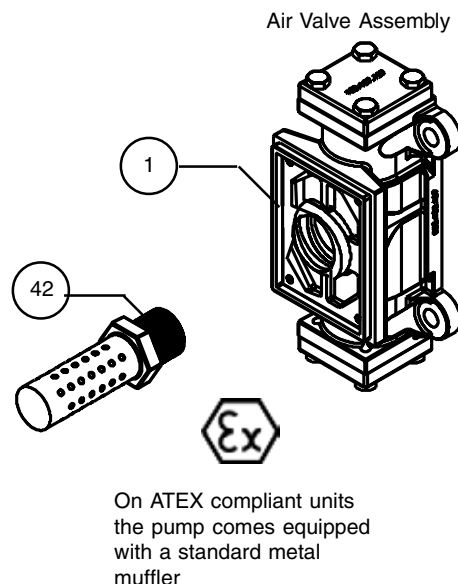

## CONVERTED EXHAUST ILLUSTRATION

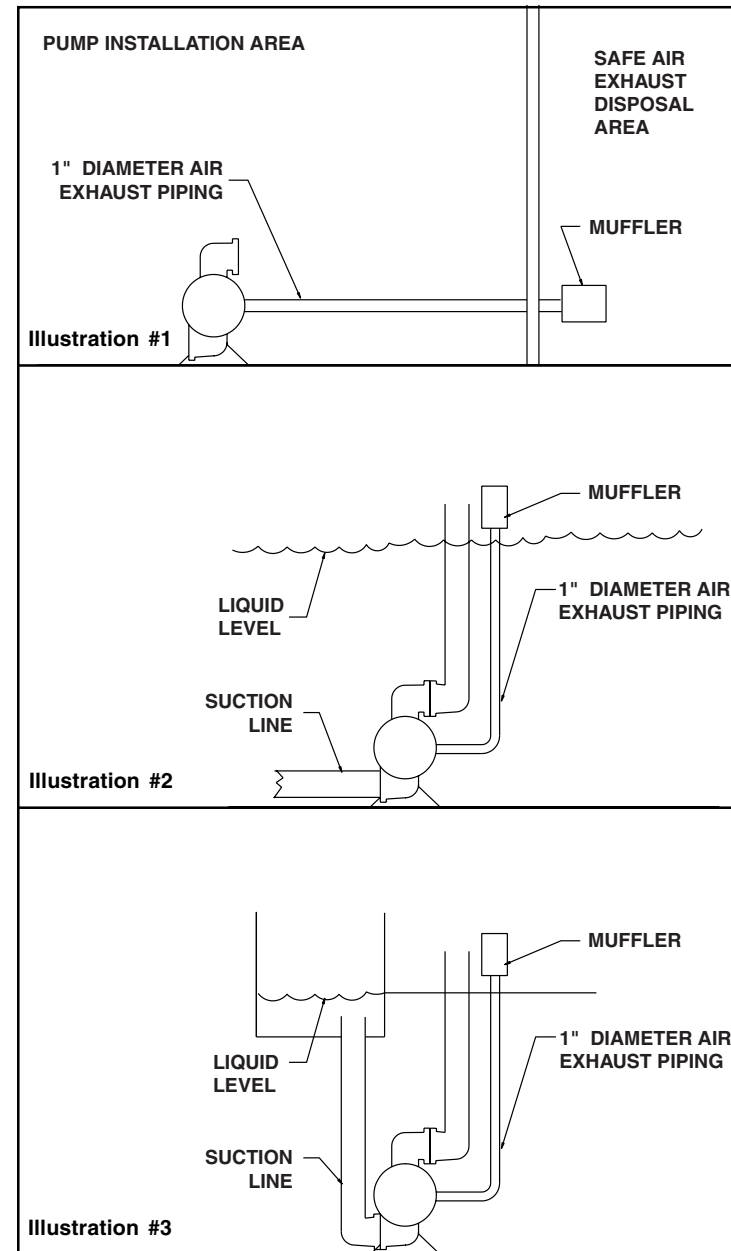



# Grounding The Pump

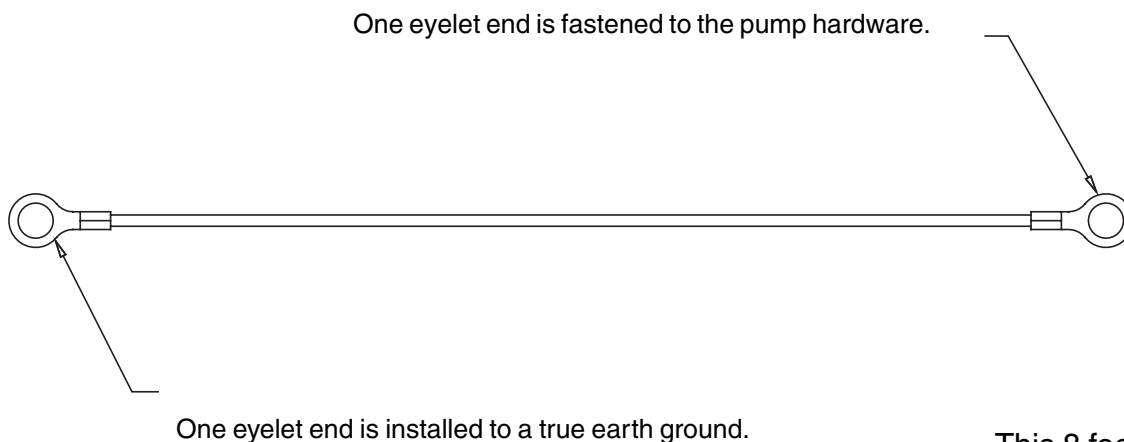

This 8 foot long (244 centimeters) Ground Strap, part number 920-025-000, can be ordered as a service part.

To reduce the risk of static electrical sparking, this pump must be grounded. Check the local electrical code for detailed grounding instruction and the type of equipment required.

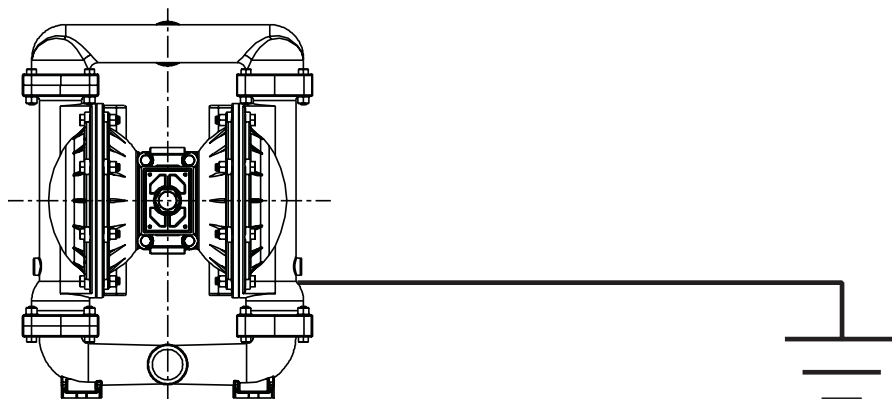

	<b>! WARNING</b>
	<i>Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded.</i>

Declaration of Conformity


Declaration of Conformity

# **BLAGDON PUMP®**

## **Declaration of Conformity**

**Manufacturer:** IDEX Pump Technologies (Ireland) Ltd.,  
A Unit of IDEX Corporation, R79, Shannon, Co Clare, IRELAND.

Certifies that Air-Operated Double Diaphragm Pump B and X Series, comply with  
the European Community Directive 2006/42/EC on Machinery, according to Annex VIII.  
This product has used Harmonized Standard EN809:1998+A1:2009, Pumps and Pump Units for  
Liquids - Common Safety Requirements, to verify conformance.

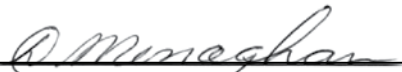  
Signature of authorized person

Des Monaghan  
Printed name of authorized person

Revision Level: F

October 20, 2005  
Date of issue

Production & Tech Manager  
Title

August 28, 2012  
Date of revision



# **BLAGDON PUMP®**

## **EC Declaration of Conformity**

In accordance with ATEX Directive 94/9/EC,  
Equipment intended for use in potentially explosive environments.

**Manufacturer:** IDEX Pump Technologies (Ireland) Ltd.,  
A Unit of IDEX Corporation, R79, Shannon, Co Clare, IRELAND.

**AODD Pumps Equipped with Aluminium**

Type Examination Certificate: KEMA 09ATEX0072 X

**AODD (Air-Operated Double Diaphragm) Pumps**

EC Type Examination Certificate No. Pumps: KEMA 09ATEX0071 X

KEMA Quality B.V.

Utrechtseweg 310

6812 AR Arnhem, The Netherlands

**Applicable Standard:**

EN13463-1: 2001,

EN13463-5: 2003



DATE/APPROVAL/TITLE:  
27 MAY 2010

  
Production and Technical Manager